

## CONTENTS

	Page
<b>1. Introduction, Matter of Code Update</b>	<b>1</b>
<b>2. Basic Data Libraries</b>	<b>2</b>
2.1    GAM-Library	2
2.2    THERMOS-Library	3
<b>3. Installation of the Code System</b>	<b>5</b>
<b>4. Input Manual V.S.O.P.-MS</b>	<b>9</b>
<b>4.1    Steering the execution mode.</b>	<b>S1 – S3      9</b>
<b>4.2    Geometric reactor design</b>	<b>11</b>
4.2.1    2-dimensional (r-z – geometry)	BI1 – BI9      11
4.2.2    3-dimensional	TR1 – TR5      15
<b>4.3    Fuel element design</b>	<b>D1 – D17      18</b>
4.3.1    Specifications	D1 – D4      18
4.3.2    Design of fuel element-types and -variants	D5 – D17      23
4.3.2.1    Coated particles	D7 – D11      24
4.3.2.2    Spherical fuel elements	D12, D13      26
4.3.2.3    Prismatic fuel elements	D14 – D16      28
4.3.2.4    Additional nuclides	D17      29
<b>4.4    Reactor and fuel cycle</b>	<b>V1 – TX26      30</b>
4.4.1    Set up dimensions	V1      30
4.4.2    Definition of materials	V2 – V5      31
4.4.3    Design and operations	V6 – V17      33
4.4.3.1    Case identification	V6      33
4.4.3.2    Definition of reactor batches	V7 – V9      34
4.4.3.3    Data for the burnup calculation	V10, V11      36
4.4.3.4    Control poison search	V12 – V14      37
4.4.3.5    Print-out options and steering	V15      38
4.4.3.6    Steering the performance for spectrum and diffusion calculation	V16, V17      38
4.4.4    Fast and epithermal neutron spectrum	G1 – G12      39
4.4.5    Thermal cell spectrum	T1 – T13      44
4.4.6    Diffusion calculation	C1 – C21      50
4.4.6.1    Title card	C1      50
4.4.6.2    General control	C2 – C6      50
4.4.6.3    Description of neutron flux problem	C7 – C10      52
4.4.6.4    Simulation of void areas	C11 – C17      55
4.4.6.5    Fixed source, specified by zones	C18 – C21      57
4.4.7    Fuel cycle costs calculation	K1 – K12      59
4.4.8    Fuel management	R1 – R34      66
4.4.8.1    General definitions	R1 – R2      66
4.4.8.2    Data for individual fuel types	R3 – R4      67
4.4.8.3    Aging boxes for discharged fuel	R5      69

4.4.8.4	Instructions for the burnup cycles	R6 – R27	69
4.4.8.5	Criticality search for the reloads	R28 – R31	85
4.4.8.6	Redefinition of CITATION edit options	R32	87
4.4.8.7	Extracted nuclides for printout	R33	87
4.4.8.8	‘Status of core’ – data set for TINTE	R 34	87
4.4.9	Fuel power histogram for decay power evaluation	LF1 – LF3	88
4.4.10	Fuel irradiation histogram for entire isotope generation	P	89
4.4.11	Preparing THERMOS-library	TTTT1 – TTTT5	90
4.4.12	2d-Thermal hydraulics	TX1 – TX26	92
<b>5.</b>	<b>Input Manual V.S.O.P. - ZUT</b>		<b>108</b>
5.1	Steering the execution mode	ZS	108
5.2	Fuel element design	DZ1 – DZ9	108
5.3	Resonance integral calculation	Z1 – Z17	113
5.3.1	Short input	Z1 – Z6	113
5.3.2	Resonance parameters	Z7 – Z9	117
5.3.3	Explicit fuel element design	Z10 – Z16	119
5.3.4	Opening of a new resonance integral data set (‘resint’)	Z17	122
<b>Appendix:</b>	<b>Structure of the code and program tasks</b>		<b>123</b>
<b>References</b>			<b>126</b>